GETTING TO KNOW YOUR CURLING WAND

1 in. (25.4mm)

Tourmaline

Ceramic-Coated

1¾ in. (44.45mm)

Heat Levels

Temperature

with LED

Displays

Cool Tip

Auto Off

Professional

Swivel Line Cord

Insulated Glove

fits Either Hand

30-Second

Instant Hear

Uniform Heat

Recovery System

IB-11153

740721A911

www.conair.com/infiniti ne sonetiziv o AIANOO-E-008-1 Conair o Infiniti by Conair", llame al Para más información sobre los productos

> ©2011 Conair Corporation Glendale, AZ 85307 7475 N. Glen Harbor Blvd. Service Department CONAIR CORPORATION

CENTRO DE SERVICIO

www.conair.com/registration Para registrar su producto, visitenos en:

derechos que varian de un Estado a otro. esbecilicos y usted puede tener otros Fata garantia le otorga derechos legales

meuciousqss bneden no regir para usted. consecuentes, de modo que las limitaciones limitación de danos especiales, incidentales o Algunos Estados no permiten la exclusión o OTRA GARANTIA, EXPRESA O IMPLICITA. INCUMPLIMIENTO DE ESTA O CUALQUIER INCIDENTAL O CONSECUENTE DEBIDO AL NINGÚN CASO POR ALGÚN DAÑO ESPECIAL, CONAIR NO SERÀ RESPONSABLE EN

regir para usted. limitaciones mencionadas pueden no garantia implicita, de modo que las limitaciones sobre la duración de una **ESCRITA.** Algunos Estados no permiten 60 MESES DE LA PRESENTE GARANTA FICO, ESTARAN LIMITADAS POR LOS Y APTITUD PARA UN PROPOSITO ESPECI-RANTIA IMPLICITA DE COMERCIABILIDAD -AB AJ A SAGATIMIJ ON ORĐĄ OGNĘ RESPONSABILIDAD IMPLÍCITAS, INCLUY-CUALQUIER GARANTÍA, OBLIGACIÓN O


de la techa de tabricación. beliogo de daranta sera de 60 meses a partir envio. En ausencia del recibo de compra, el 1-800-3-CONAIR para recibir instrucciones de brueba de compra y deben llamar al residentes de California sólo necesitan dar una US\$7.00 por gastos de manejo y envio. Los tecipo de compra y un cheque o giro postal de Servicio indicado a continuacion, Junto con su garantia, regrese su aparato al Centro de Para obtener servicio técnico bajo esta detectos de materiales o tabricación.

s partir de la fecha de compra si presentara sbarato sin cargo por un periodo de 60 meses Conair reparará o remplazará (a su opción) su

GARANTIA LIMITADA DE CINCO ANOS

LOS APARATOS PEQUENOS SIEMPRE DESENCHUE

los aparatos eléctricos después de usarlos. corriente. Por lo tanto, siempre desenchufe aunque esté apagado? Si está conectado, hay nu abarato electrico permanece bajo tension electricidad y el agua. Pero ¿Sabe usted que lodos sabemos que no se debe mezciar la

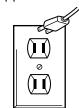

DEL AGUA MANTENGALO ALEJADO

ESTA EQUIVOCADO APAGADO, ESTÁ AŢSƏ OTARAYA JƏ СОВВІЕИТЕ СПАИДО SI CREE QUE NO HAY **ADVERTENCIA:**

Inuta que lo conecta al secador este suelta y aparato. Permita que el cable cuelgue o que la enchufe. No enrolle el cable alrededor del viivos. No tironee ni retuerza el cable al nivel del lugar seco y seguro, fuera del alcance de los almacenar. Permita que enfrie y guardelo en un Cuando no lo utiliza, su aparato es fácil de

ALMACENAJE

manera intermitente. el aparato dejara de funcionar o funcionara de iumediatamente si el cable parece danado o si dañado. Deje de usar el aparato trecuencia para asegurarse de que no este nu cortocircuito. Inspeccione el cable con lo conecta al aparato, produciendo su ruptura o sbarato. Esto podria danar la junta flexible que Nunca lo enrolle con fuerza alrededor del NUNCA jale, retuerza ni doble mucho el cable.

PRECAUCION

autorizado. No trate de repararlo. dne eutrie y regreselo a un centro de servicio inncionamiento, desconecte el aparato, permita bsno humedecido. En caso de mai que enfrie y limpie la superficie exterior con un sea necesario limpiarlo, desenchúfelo, permita sperturas libres de polvos y pelusas. Cuando necesita lubricación. Mantenga todas las 2u aparato requiere poco mantenimiento. No

OTN3IMIN3TNAM INSTRUCCIONES DE



FAMILIARICESE CON SU RIZADOR

LIMITED FIVE YEAR WARRANTY

USER MAINTENANCE

Your curling wand is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION


NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF. YOU'RE WRONG.

KEEP AWAY FROM WATER

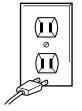

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

> **ALWAYS UNPLUG SMALL APPLIANCES**

Conair will repair or replace (at our option) your

unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed, together with your purchase receipt and \$7.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES. INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF **MERCHANTABILITY AND FITNESS FOR A** PARTICULAR PURPOSE. SHALL BE LIMITED IN DURATION TO THE 60-MONTH DURATION OF THIS WRITTEN. LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL. INCIDENTAL. OR CONSEQUEN-TIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights.

and you may also have other rights, which vary

from state to state.

For info on any Conair or Infiniti by Conair product, call: 1-800-3-CONAIR or visit us on the web at: www.conair.com/infiniti

Please register this product at: www.conair.com/registration

SERVICE CENTER

CONAIR CORPORATION Service Department 7475 N. Glen Harbor Blvd. Glendale, AZ 85307 ©2011 Conair Corporation





unitormes y peinados pertectos. temperatura. Esto permite obtener resultados qe capello esta puesta en torma con la misma constante, sin pèrdida de calor. Cada sección el uso, este sistema mantiene la temperatura herramientas cuya temperatura baja durante los ingenieros de Conair. A diferencia de otras las herramientas profesionales creadas por sistema de conservación del calor, al igual que Su aparato también está dotado de un

SISTEMA DE CONSERVACIÓN DEL CALOR

deseados, sin lastimar el cabello. más grueso, y siempre obtener los resultados an fipo de cabello, desde el mas fino hasta el bermitirle escoger la temperatura perfecta para Cuenta con 5 opciones de temperatura para constante durante el uso.

miento muy rápido y mantiene la temperatura resistencia de cerámica que logra un calenta-Su rizador está dotado de una potente

& 5 OPCIONES DE TEMPERATURA CALENTAMIENTO INSTANTANEO

Nunca deje el aparato desatendido después

ej inpo caliente puede causar molestias. protección duradera. El contacto prolongado con uo ya siqo qiseyaqo bara broporcionar una Sin embargo, tenga presente que este "guante" mano al enrollar el cabello alrededor del tubo. jucjnimos nu "dnante", aislante para proteger su

TINATROYMI

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS **BEFORE USING** KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

- 1. Always unplug appliance immediately after using.
- 2. Do not use while bathing or in the shower.
- 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 4. Do not place in, or drop into, water or other
- 5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.

- 2. This appliance should not be used by, or
- or near children or individuals with certain disabilities.
- 3. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

rápidamente. manera perfecta para rizar su cabello fácil y poco al principio. Con práctica, encontrará la de cabello. Será necesario experimentar un

A Repita el proceso con las otras secciones entrie antes de peinarlo para "tijar" los rizos. secciones más gruesas. Permita que el cabello finas. Para obtener ondas más sueltas, enrolle apretados, divida el cabello en secciones más fácil y rápidamente. Para obtener rizos más cabello. Siempre obtendrá hermosos resultados, cabello), y luego desenrolle delicadamente el durante 5 a 8 segundos (según el tipo de cspello por las puntas

3 Sostenga el midad del mismo. sirededor dei tubo hacia

S Enrolle el cabello cabelludo. bnjðsgss (2 cm) gej cneto

-911X9 BI

Empezando a 2 de 1 pulgada (2.5 cm). cabello en secciones 19 Bivida el de secano.

sople cabello antes loción fijadora ligera optimos, aplique una Para lograr resultados

FUNDAMENTOS DEL RIZADO

- 4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.
- Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around appliance.
- Never use while sleeping.
- 7. Never drop or insert any object into any opening or hose.
- 8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 9. Unit is hot when in use. Do not let heated surfaces touch eves or skin.
- 10. Do not place the heated unit directly on any surface while it is hot or plugged in. Use stand provided.
- 11. Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- 12. Do not use an extension cord with this appliance
- 13. Do not touch hot surfaces of the appliance. Use handles or knobs.
- 14. Do not attempt to touch the housing of your appliance near the barrel, as it is hot when in use.
- 15. Do not operate with a voltage converter.

SAVE THESE INSTRUCTIONS

Cabello resistente (360°F-400°F) xsM\oflA Cabello grueso u ondulado (4°088) otlA-oib9M Cabello normal, espeso o tratado Cabello delicado, fino o dócil Encendido/Bajo (285°F) AJUSTE DE TEMPERATURA | TIPO DE CABELLO

Guia de temperatura

sednu sn tipo de cabello! temperatura alto. ¡Personalice la temperatura. recomendamos que utilice un nivel de esbeso, grueso, ondulado o resistente, le nu vivel de temperatura bajo. Si su cabello es cabello es fino, le recomendamos que utilice remperatura, para todo tipo de cabello. Si su Este aparato ofrece 4 opciones de

con la piel después de encender el aparato. caliente en segundos. Evite todo contacto ADVERTENCIA: El tubo se volverá muy

que el aparato caliente durante 30 segundos. encendido/bajo (285 °F) se encenderá. Permita aparato. Encienda el aparato. La luz de El cabello debe estar limpio y seco. Enchufe el

FUNCIONAMIENTO BASICO

máticamente después de 60 minutos. seguridad, el aparato se apagará autodesatendido después de encenderlo. Para su resultados óptimos. Nunca deje el aparato tecnologia, pues facilita el peinado y logra Fe nu bjøcet frabajer con esta nueva

letiene en cabello despues de rizarlo: brillantes, igual que en el salon. Además, no uniformemente, para crear peinados sedosos y la estática y el frizz. Distribuye el calor cerámica/turmalina también ayuda a controlar después de cada uso. El revestimiento de tubo y que es muy fácil limpiar el aparato que el cabello se desliza fácilmente sobre el suave, lo ultimo en tecnologia ceramica. Notara capa de cerámica y turmalina increiblemente El tubo de su rizador está cubierto con una

CERAMICA/TURMARINA **REVESTIMIENTO DE**

función de seguridad. electricista. No intente ir en contra de esta completamente, comuniquese con un de corriente, invièrtela. Si aún no entrara corriente polarizada. Si no entrara en la toma enchutar de una sola manera en la toma de otra). Como medida de seguridad, se podrá cjavija polarizada (una pata es más ancha que FI cable de este aparato está dotado de una

120 voltios (120V AC). solamente con Corriente Alterna (60 Hz) de Para uso doméstico solamente. Uselo

DE OPERACION INSTRUCCIONES INSTRUCCIONES **GUARDE ESTAS**

15. No utilice este aparato con un convertidor

se vuelve muy caliente durante el uso. No lo 14. El cuerpo del aparato cerca del tubo aire

aparato. Utilice el mango y los botones o 13. No toque las partes calientes de este 12. No utilice una extensión con este aparato. beinsas, cabellos y elementos similares. obstruir. Mantenga las aberturas libres de como una cama o un sota, donde se puedan colodue el aparato en una superficie blanda, 11. Nunca bloquee las aberturas de aire ni conectado. Utilice el soporte integrado. superficie mientras esté caliente o

10. No colodue el aparato en ninguna superficies calientes. Mantenga los ojos y la piel alejados de las Este aparato se vuelve muy caliente.

serosol (spray) o donde se esté administrando ust qouqe se esteu nasudo productos en 8. No lo utilice en exteriores, ni lo haga funciouinguna de las aberturas.

7. Nunca deje caer ni inserte un objeto en dormido/a o adormilado/a. 6. Nunca utilice este aparato mientras estè

cable alrededor del aparato. callentes. No jale, retuerza ni enrolle el 5. Mantenga el cable alejado de superficies autorizado para su revisión o reparación. Regrese el aparato a un centro de servicio hubiese caído o si estuviese dañado. dne unpieze inuciouago mai o dne ze clavija estuviesen danados, después de 4. No opere este aparato si el cordón o la

recomendados por el tabricante. según las instrucciones. Sólo use accesorios propósito para el cual fue diseñado y solamente 3. Utilice este aparato unicamente con el

sople o cerca de niños o personas con alguna

2. Este aparato no debería ser usado por, 1. Nunca deje el aparato desatendido riesgo de quemaduras, electrocución, **ADVERTENCIA** — Para reducir el inmediatamente. No toque el agua. 5. Si el aparato cayera al agua, desconéctelo

> agua u otro liquido. 4. No coloque el aparato ni lo deje caer al

bnegs cset o set embnjado a una banera o un 3. No colodue ni guarde este producto donde 2. No lo use en el baño o la ducha.

inmediatamente despues de usarlo. 1. Siempre desconecte el aparato

mientras este conectado.

incendio o heridas:

muerte o herida por descarga: esté apagado. Para reducir el riesgo de enchufado permanece bajo tensión, aunque PELIGRO - Cualquier aparato

DEL AGNA *Mantengalo alejado* **OJRAZU 30 S3TNA** LAS INSTRUCCIONES **SAGOT A3J**

básicas de seguridad, entre las cuales las sieu la presencia de niños, debe tomar precauciones Siempre que use aparatos eléctricos, especialmente

SETNATROOMI MEDIDAS DE SEGURIDAD

IMPORTANT

A heat-protective glove has been supplied to help protect your hand from temporary contact with the barrel when wrapping the hair around

Please note that the heat-protective glove is only designed to give initial contact protection. Discomfort will be caused by prolonged contact with the hot surface.

Never leave your curling wand on and

USING INSTANT HEAT, THE 5 HEAT TEMPERATURE SETTINGS

This styling wand features a ceramic heater that maintains constant temperature during use for precision styling.

This Instant Heat technology has 5 ultra-high heat temperature settings. There is a temperature range that's gentle and safe for every type of hair, from the finest to the most resistant, and helps you create the look you want.

UNIFORM HEAT RECOVERY SYSTEM

Conair's professional salon standards of

engineering provide you with a uniform and improved heat recovery system that maintains the wand at constant temperatures. There is a constant surge of power to ensure that heat is continuously and quickly delivered for optimal styling results, unlike other units, which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

OPERATING INSTRUCTIONS

This curling wand is intended for household use. Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 120V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety

TOURMALINE CERAMIC EASY-GLIDE BARREL

The barrel of your new curling iron has a Tourmaline Ceramic Technology easy-glide surface, the newest technology. This means it's not only simpler to clean off styling product residue, etc., after each use, but you'll find that hair glides easily over the surface of the barrel as you're curling. The tourmaline ceramic surface also helps smooth down flyaways and frizzies. It evenly distributes heat so that the style you create has a salonperfect, silky smooth, shining finish. Hair also slips right through the barrel after it's curled.

The new Tourmaline Ceramic Technology is a pleasure to work with and makes styling your hair easier and the results more professional. Never leave your curling iron on and unattended. However, should you fail to turn the iron off, it will shut itself off automatically within 60 minutes.

GETTING STARTED

Hair should be clean and completely dried before using the curling wand. Plug the wand into an electrical outlet. Turn on unit. The Power/ Low 285°F setting will become illuminated. Allow unit to heat up for 30 seconds.

WARNING: The curling wand's barrel will get very hot within a few seconds and should not be placed in contact with the skin after the curling wand has been turned on.

The wand's unique 4 heat temperature settings and Instant Heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-curl hair, keep the heat setting on high. You can vary the wand's temperature according to your particular need!

Temperature Setting Guide

	LED TEMP. CONTROL	HAIR TYPE
	Power/Low 285°F	Delicate, thin, easy-to-curl hair
	Medium 310°F	Average-to-thick or treated hair
	Med-High 330°F	Thick or wavy hair
	High/Max 360°F-400°F	Hard-to-curl hair

TO CURL HAIR

For best results, use a light styling product before blow-drying hair.

Take a 1-inch wide section of hair, starting 2 inches from the scalp.

2 Wind the section of hair around the thicker portion of the barrel toward the cool tip.

 Hold the end of the hair in place at the cool tip for 5 to 8 seconds, depending on hair type,

and then release. Since there is no clamp, you can easily curl hair without kinks. For tighter, bouncier curls, roll less hair. For loose, free-flowing curls, roll more hair. To set the curl, do not comb or brush hair until it cools.

4 Repeat process on additional sections of hair until you achieve the hair style you desire. Some experience is necessary when learning to use this curling wand. After using several times, you will learn the ideal way to curl and style your hair.